


Flyin' Miata

Tow hook installation instructions 29-9XXXX

1. The front tow hook (29-99000) installs in place of the original tie-down points ("baby teeth"). Remove the three bolts holding them in place (arrow 1, plus one that's hidden), and bolt this tow hook/eye in its place. You can use either side. If the bolts are missing, use M10x1.25x30 bolts. Be aware that the tow hook doesn't deal well with upward forces, so depending on how the car is towed the hook may need to be replaced after use.

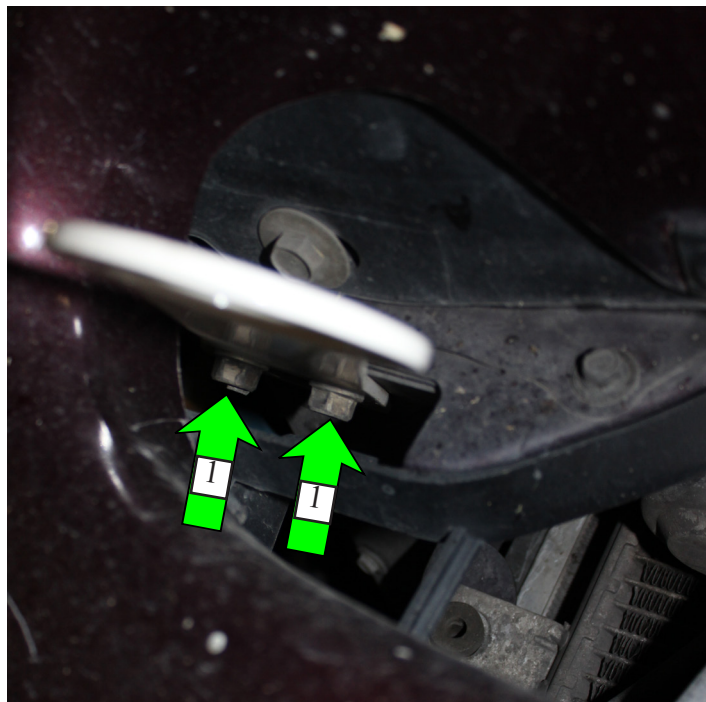

2. The rear hook (29-99001) installs in the same manner, replacing the right rear tie down point (it won't work on the left side). The rear hook isn't indestructible, but it's stronger than the front hook. The rear hook only works for 1990-1997 cars.

